



REPLACEMENT PARTS

Ref.			Ref.		
<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	34-894	FENCE	43	422-27-020-0003	END CAP-LH
2	400-06-327-0001	CLAMP ASSY	44	422-27-020-0004	END CAP-RH
3	400-06-312-0005	FENCE BODY ASSEMBLY, INCL:	45	422-27-014-0003	Z BRACKET, (NOTE C)
4	422-27-754-0012	LABEL	46	904-02-010-1716	7/16" LOCK WASHER
5	422-27-752-0018	LABEL	47	901-01-060-0680	7/16-20 X 3/4" HEX HD SCREW
6	422-27-754-0013	LABEL	47A	904-01-010-1638	FLAT WASHER
7	422-39-112-0005	LEVELING SCREW	48	901-11-020-0821	1/4-20 X 3/4" CARRIAGE HD SCREW
8	422-39-048-0001	ADJUSTMENT PLUG	49	422-27-089-0007	ANGLE BRACKET
9	902-01-010-1300	5/16-18 HEX NUT	50	901-25-043-1791	8 X 3/4" HEX WASHER HD SCREW
10	422-27-048-0001	REAR SUPPORT FOOT	51	904-01-010-1614	FLAT WASHER
11	422-27-068-0003	LOCKING LUG	52	902-01-120-1034	1/4-20 HEX NUT
12	905-01-010-2702	1/4" X 5/8" SPRING PIN	56	901-25-043-1791	8 X 3/4" HEX WASHER HD SCREW
13	908-25-013-1808	O-RING	58	422-27-366-0005	LEG ASSY
14	904-01-010-1620	FLAT WASHER	64	1350481	LEG ADAPTER
15	424-12-060-0005	KNOB	66	902-01-020-5433	3/8-16 JAM NUT
16	901-02-443-1812	8-32 X 1/2" PAN HD SCR	67	901-09-131-5295	LEVELING SCREW
17	904-01-013-1738	3/16" FLAT WASHER	80	422-27-628-0024	FLIP STOP ASSY., INCL:
18	400-06-375-0002	CURSOR	81	901-01-060-0649	5/16-18 X 1.00 HEX HEAD SCREW
19	921-01-110-0001	BALL	82	422-27-084-0007	BRACKET
20	928-01-250-0001	SPRING	83	902-01-212-2409	LOCKNUT
21	901-04-150-9440	1/4-20 X 1/2" HEX SOC SET SCREW	84	422-27-088-0002	FLIP STOP
22	422-27-104-0002	THRUST WASHER	85	904-07-010-5573	WASHER
22A	908-25-013-1808	O-RING	86	424-12-060-0005	KNOB 2" 5/16-18
23	422-39-106-0002	SHAFT	87	901-01-060-0622	1/4-20 X 2" HEX HEAD SCREW
24	908-25-013-1756	O-RING	95	78-851	TABLE FOR U30
25	905-01-103-1370	5/16" X 1 1/4" SPRING PIN		78-852	TABLE FOR U50
26	901-05-163-1229	10-16 X 1/2" PAN HD SCREW	96	422-27-725-0022	HARDWARE PACK
27	422-39-019-0001	CAM HANDLE			
28	422-39-138-0002	HANDLE			
29	422-39-105-0001	GRIP			
33	904-01-010-1615	3/8" FLAT WASHER, (NOTE B)			
37	902-01-010-5900	3/8-16 JAM NUT, (NOTE B)			
39	901-01-060-0642	3/8-16 X 1 SCREW, (NOTE B)			
41	36-130	FRONT GUIDE RAIL, INCL., 30" RAIL			
	36-150	FRONT GUIDE RAIL, INCL., 50" RAIL			
	36-196	FRONT GUIDE RAIL, INCL., 96" RAIL			
42	400-06-432-0001	SCALE KIT, (NOTE A)			
				ACCESSORIES: (Optional)	
			97	36-197	ADAPTOR , (NOTE C)

SERVICE NOTE:

A – Scale is provided oversize and must be cut to proper length.

B – When attaching to cast iron wing use 2 ea.; when attaching to sheet metal wing use 3 ea.

C – Use Ref. 97 when attaching table board to saws without a right wing. Use Ref. 45 when attaching table board to saws with a right wing.

STANDARD SAFETY EQUIPMENT

In order to promote tool safety, Delta Machinery strictly enforces the policy of repairing or replacing any damaged or missing standard safety equipment on machines presented to Delta Authorized Service Centers for service/repairs. Any product that is presented to a Delta Authorized Service Centers for repairs which contains missing or damaged standard safety equipment will have that equipment repaired or replaced and the customer will be charged for any such service/repairs. Customers can avoid such charges only if the missing safety component is supplied to the service center at the time of repair.

This parts list is provided to aid in obtaining service parts. Copies of the instruction and maintenance literature can be obtained through the Delta Technical Publications Department or through your service outlet.