


# PORTER-CABLE

## DRILLS

**WARNING:** Electrical repairs should only be attempted by trained repairmen. Contact the nearest Porter-Cable Service Center or other competent repair center.

**2601**  
**2620**  
**2621**  
**6611**  
**6614**  
**6615**

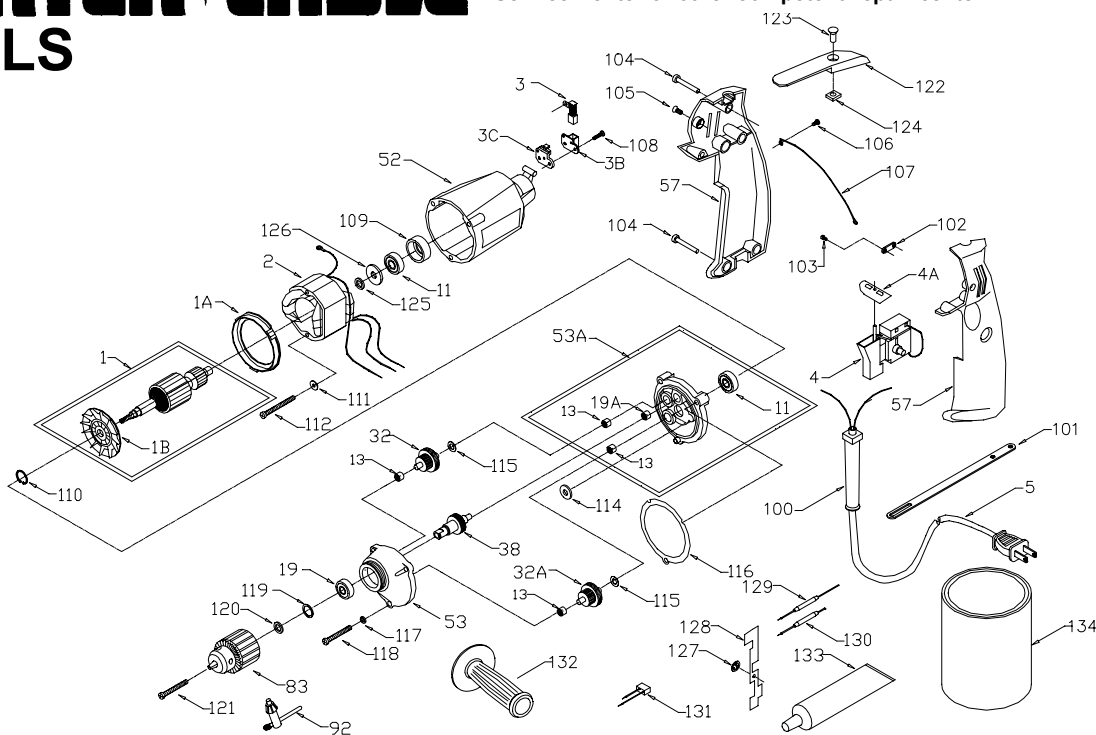

**Ref. No.**

Ref. No.	Part No.	Description
1	876480	Armature, 120V, 2601
	876607	Armature, 120V, 2620, 2621
	876466	Armature, 120V, 6611, 6614, 6615
	887753	Armature, 230V
1A	811350	Baffle
1B	811292	Armature Fan
2	876479	Field, 120V
	886949	Field, 230V
3	869734	Brush
3B	869691	Brush Holder
3C	811490	Brush Insulator
4	888146	Switch, VSR 120V
	885315	Switch, VSR 230V
4A	875868	Fwd/Rev Button
5	695854	Cord, Incl: Ref. 100
	886484	Cord 230V - Euro., Incl: Ref. 101
11	855284	Ball Bearing
13	693808	Needle Bearing
19	883096	Spindle Bearing, 2601, 2620, 2621
	695700	Spindle Bearing, 6611, 6614, 6615
19A	693808	Needle Bearing
32	697675	Idler Gear Assy., 2601
	697661	Idler Gear Assy., 2620, 2621
	697679	Second Idler Assy., 6611
	697680	Second Idler Assy., 6614, 6615
32A	697672	First Idler Assy., 6611, 6614, 6615
38	876482	Spindle Gear Assy., 2601
	697720	Spindle Gear Assy., 2620, 2621
	697724	Spindle Gear Assy., 6611
	697725	Spindle Gear Assy., 6614, 6615
52	876677	Motor Housing, Incl: Ref. 110
53	697681	Gear Housing, 2601, 2620, 2621
		Incl: Ref. 13
	697682	Gear Housing, 6611, 6614, 6615,
		Incl: Ref. 13
53A	697684	Inter. Plate Assy., Incl: Ref. 11, 13, 19A
57	876612	Handle Assy., 120V, Incl: Ref. 102, 103, 104, 106
	886473	Handle Assy., 230V
83	862129	Chuck, 0 - 1/4", 2601
	692074	Chuck, 0 - 3/8", 2620, Incl: Ref. 92, 121
	895567	H/Tite Chuck, 3/8" 2621 Current Units
	695170	Chuck, 0 - 3/8", 6611
	844495	Chuck, 5/64" - 1/2", 6614
	891237	H/Tite Chuck, 1/2" 6615 T2
	879696	Keyless Chuck, 1/2", 6615 T1

**Ref. No.**

Ref. No.	Part No.	Description
92	801391	Chuck Key, 2601
	826226	Chuck Key, 2620, 6611
	875134	Chuck Key, 6614
100	810716	Strain Reliever
101	856510	Key Holder
102	861434	Cord Clamp
103	882703	Screw
104	882189	Screw
105	866340	Screw
106	864137	Screw
107	877533	Lead Assy.
108	864136	Screw
109	694432	Bearing Mount
110	847564	Snap-Ring, Service Only
111	802214	Washer
112	876651	Screw
114	852714	Slinger
115	848741	Washer
116	697203	Gasket
117	802648	Lockwasher
118	694015	Screw
119	859769	Snap-Ring, 2601, 2620, 2621
	859382	Snap-Ring, 6611, 6614, 6615
120	861720	Spacer, 2601, 2620, 2621
	695727	Spacer, 6611, 6614, 6615
121	858600	Chuck Screw, 2601
	691667	Chuck Screw, 2620, 2621
	865686	Chuck Screw, 6611, 6614, 6615
122	875861	Belt Clip
123	876181	Screw
124	875862	Nut
125	849328	Spacer, 230V
126	886582	Insulating Washer, 230V
127	886627	Retaining Ring, 230V
128	886620	Insulator, 230V
129	886571	Choke, Blue 230V
130	886572	Choke, Red 230V
131	886574	Capacitor, 230V
132	810543	Auxiliary Handle, 6611, 6614, 6615

**ACCESSORIES: (Optional)**

133	878499	Lubricant, 5 1/2 Ounce Tube
134	879751	Lubricant, 4 Pound Can