


PORTER-CABLE

ROUTER TABLE

WARNING: Electrical repairs should only be attempted by trained repairmen. Contact the nearest Porter-Cable Service Center or other competent repair center.

697
698

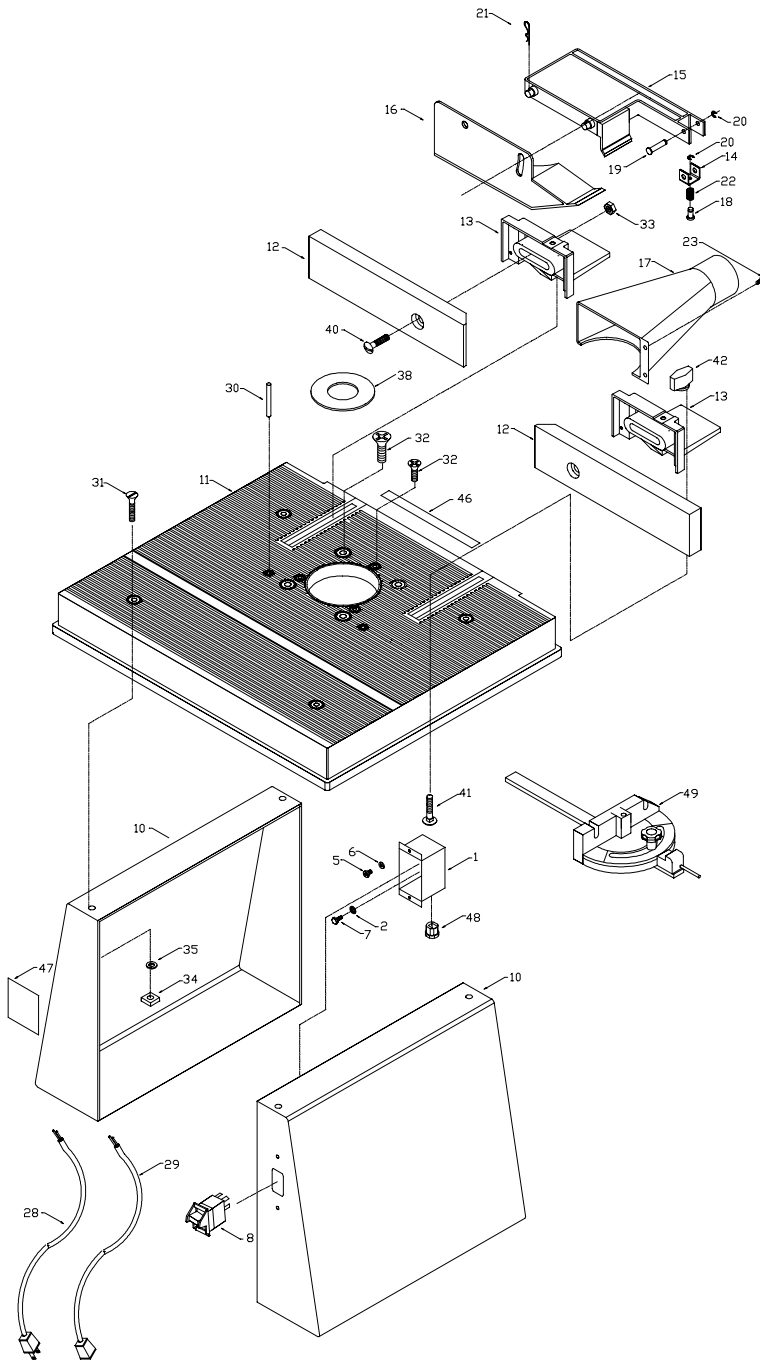

Ref.

No.	Part No.	Description
1	886364	Switch Box
2	802414	Washer
5	852310	Screw
6	886370	Washer
7	886515	Screw
8	887045	Switch, Incl:
	875330	Switch Key
10	884725	Leg
11	884731	Table Top
12	884778	Fence
13	884779	Fence Bracket
14	884820	Bracket (Guard)
15	884821	Top Guard
16	884822	Front Guard
17	884823	Rear Cutter Guard
18	884887	Pin
19	884888	Pin
20	n 697965	Retaining Ring
21	886366	Clip
22	884891	Spring
23	884892	Screw
28	885309	Cordset (Male)
29	885310	Cordset (Female)
30	694949	Dowel Pin
31	886513	Screw
32	885048	Router Mtg. Screw - Use With PC Routers 2 HP & Up Except Model 7529
	881305	Router Mtg. Screw - Use With PC Routers Less Than 2 HP
	892956	Router Mtg. Screw - Use With PC Model 7529
33	n 901965	Hex Nut
34	800192	Square Nut
35	822133	Lock Washer
38	884729	Insert (1 3/8" I.D.)
	884730	Insert (2 5/16" I.D.)
40	884893	Screw
41	884894	Bolt
42	884895	Knob
46	886331	Caution Plate
47	886332	Warning Plate
48	886398	Strain Relief
49	6970	Miter Gauge, Incl.:
*	1087524	Knob
*	884898	Hardware Pkg.

MODEL 697 INCLUDES:

*	6912	Router Motor
*	875811	Router Base Housing (Mounting Bracket)
*	842580	Clamp screw
*	823374	Clamp Washer
*	874582	Clamp Knob
*		Not Shown