



April 1998
CONSUMER

10" TABLE SAW

Model F012330000

3300

open for tool illustration

Pos.	Part Number	Description {Qty}	F/C	Pos.	Part Number	Description {Qty}	F/C
1	2 610 358 924	Motor Housing	71	57	2 610 358 901	Screw	89
2	2 610 358 925	Field 120V	22	58	2 610 358 900	Pointer	9
3	2 610 905 924	Armature w/Fan 120V	AW	59	2 610 358 889	Rip Fence Housing	9
4	2 610 358 111	Switch On/Off	15	60	2 610 990 537	Rip Fence Body	9
5	2 610 905 902	Cord 120V	11	61	2 610 358 887	Rear Sliding Pad	88
6	2 610 358 840	Strain Relief	11	62	2 610 358 886	Spring	27
7	2 610 358 842	Cord Clamp	89	63	2 610 358 885	Clamp	80
8	2 610 994 072	Nameplate	9	64	2 610 990 538	Rod	9
13	2 610 015 747	Ball Bearing	60	65	2 610 358 906	Miter Guage Knob	63
14	2 610 017 349	Ball Bearing	61	66	2 610 358 907	Washer	65
18	2 610 358 800	Guard	91	67	2 610 358 910	Miter Guage Body	9
19	2 610 990 536	Base	9	68	2 610 358 911	Pin	66
20	2 610 909 881	Label "Warning"	9	69	2 610 358 913	Sliding Pad	88
21	2 610 702 414	Screw	89	70	2 610 358 832	Screw {9}	89
22	2 610 358 803	Spacer {2}	82	71	2 610 990 539	Screw	89
23	2 610 358 801	Washer	65	72	2 610 990 540	Pointer	9
24	2 610 358 802	Washer {6}	65	73	2 610 358 912	Guide Bar	9
25	2 610 304 772	Nut {2}	89	74	2 610 358 858	Arbor Nut	89
26	2 610 358 804	Rubber Pad	88	75	2 610 358 857	Outer Flange	91
27	2 610 905 900	Bracket	9	77	2 610 358 914	Shaft	52
28	2 610 358 806	Pivot {2}	54	78	2 610 358 915	Key	66
29	2 610 358 807	Push Nut {4}	89	79	2 610 015 361	Ball Bearing	61
31	2 610 358 811	Pin	66	80	2 610 358 916	Retaining Ring	89
32	2 610 358 808	Anti-Kickback Pawl {2}	80	81	2 610 358 920	Screw & Washer {6}	89
33	2 610 358 809	Spacer {2}	82	82	2 610 358 917	Bearing Cap	56
34	2 610 358 814	Splitter	9	83	2 610 358 918	Bearing Housing	73
35	2 610 358 810	Spring	27	84	2 610 358 919	Spindle Gear	32
36	2 610 358 812	Roll Pin	66	85	2 610 358 922	Needle Bearing	56
37	2 610 358 813	Push Nut {2}	89	86	2 610 908 278	Gear Housing	72
38	2 610 703 214	Screw	89	87	2 610 358 926	Screw {2}	89
39	2 610 910 013	Washer {2}	65	88	2 610 358 936	Washer {2}	65
40	2 610 358 816	Splitter Block	9	89	2 610 358 927	Washer	65
41	2 610 358 819	Screw {4}	89	90	2 610 358 928	Screw {3}	89
42	2 610 910 012	Splitter Bracket	9	91	2 610 351 107	Nut {2}	89
43	2 610 910 015	Carriage Bolt	89	92	2 610 358 937	Brush Holder Pad {2}	25
44	2 610 355 325	Lock Washer	89	93	2 610 358 935	Rear Motor Cover	70
45	2 610 358 821	Wing Nut	89	94	2 610 358 932	Connector	10
46	2 610 358 897	Rip Fence Handle	74	95	2 610 990 542	Cable	10
47	2 610 044 563	Nut	89	96	2 610 358 934	Strain Relief	11
48	2 610 358 895	Cam Pin	66	97	2 610 358 822	Insert	9
49	2 610 358 896	Pin	66	98	2 610 358 823	Screw {2}	89
50	2 610 358 894	Roll Pin	66	99	2 610 358 824	Nut {2}	89
51	2 610 910 017	Cam	80	100	2 610 358 826	Screw {6}	89
52	2 610 358 890	Lever	64	101	2 610 358 827	Screw	89
53	2 610 358 891	Front Clamp	80	102	2 610 358 828	Screw	89
54	2 610 358 892	Screw {2}	89	103	2 610 990 543	Table	88
55	2 610 358 898	Screw	89	104	2 610 993 779	Scale	9
56	2 610 358 899	Spring	27	105	2 610 358 876	Nut {11}	89

+ = Not Illustrated * = As Required F/C = Failure Code AW = Refer to AW Labor Time Chart

Pos.	Part Number	Description {Qty}	F/C	Pos.	Part Number	Description {Qty}	F/C
106	2 610 358 867	Strap {2}	80	142	2 610 358 841	Screw {2}	89
107	2 610 905 903	Rod	5	143	2 610 909 882	Label "Warning"	9
108	2 610 903 744	Strap {4}	80	144	2 610 358 830	Screw {4}	89
109	2 610 905 904	Bracket	9	145	2 610 306 005	Screw {2}	89
110	2 610 358 863	Screw	89	146	2 610 026 248	Lock Washer {2}	89
111	2 610 358 865	Saddle	9	147	2 610 358 881	Pointer	9
112	2 610 905 908	Screw {3}	89	148	2 610 990 549	Deflector Plate	9
113	2 610 358 882	Roll Pin {2}	66	149	2 610 994 251	Spacer	82
114	2 610 908 268	Screw {2}	89	150	2 610 994 252	Bolt	89
115	2 610 908 270	Washer {2}	65	650	2 610 358 853	Arbor Wrench	9
116	2 610 908 271	Screw {2}	89	651	2 610 358 854	Nut Wrench	89
117	2 610 908 269	Support Bracket	62	753	80093	Table Saw Stand	9
118	2 610 990 544	Motor Bracket	62			w/pos. 753/6 - 753/10	
119	2 610 910 044	Screw	89	753/6	2 610 016 325	Bolt {24}	89
120	2 610 358 860	Screw {3}	89	753/7	2 610 994 262	Nut {28}	89
121	2 610 908 272	Nut {2}	89	753/8	2 610 967 194	Bolt {4}	89
122	2 610 358 861	Screw {2}	89	753/9	2 610 909 178	Washer {4}	65
123	2 610 358 862	Spacer {2}	82	753/10	2 610 994 283	Foot {4}	9
124	2 610 358 869	Retaining Ring	89	754	80099	Dust Bag Kit	9
125	2 610 901 978	Spacer	82			w/pos. 754/2	
126	2 610 358 874	Rocker Bar	9	754/2	2 610 990 516	Dust Bag	9
127	2 610 358 877	Nut {2}	89	756	80088	Table Extension Kit	9
128	2 610 358 878	Washer	65			w/pos. 756/2 - 756/6	
129	2 610 358 879	Washer	65	756/2	2 610 351 293	Washer {4}	65
130	2 610 358 868	Pin	66	756/3	2 610 304 772	Nut {2}	89
131	2 610 990 545	Mounting Plate	62	756/4	2 610 702 414	Bolt {2}	89
132	2 610 903 733	Spring	27	756/5	2 610 905 936	Bolt {2}	89
133	2 610 990 546	Adjustment Wheel	63	756/6	2 610 911 906	Lock Washer {2}	65
134	2 610 358 838	Knob	63	810	2 610 358 968	Brush & Holder Set	25
135	2 610 990 547	Screw	89	818	2 610 358 943	Blade Guard Assembly	92
136	2 610 358 833	Washer {2}	65			w/pos. 18, 21 - 29, 31 - 37	
137	2 610 990 548	Handle Lock	80	860	2 610 994 254	Rip Fence Assembly	87
138	2 610 358 844	Screw {3}	89			w/pos. 24, 41, 46 - 64	
139	2 610 910 018	Switch Cover	9	867	2 610 994 255	Miter Guage Assembly	87
140	2 610 358 831	Clamp Plate	89			w/pos. 65 - 73	
141	2 610 358 846	Rubber Foot {4}	9	N/A	Not Available Separately		

Service Notes:



